



PART # CA2699U

2001-2006 CHEVY HD UPPER CONTROL ARMS INSTALLATION INSTRUCTIONS



Rev. # 10-01

Please take the time to read these **INSTALLATION INSTRUCTIONS** and check the **Hardware Parts List** to be sure you have all the listed parts.

These installation instructions are prepared for the professional installer with the proper equipment, tools and experience in suspension systems and safety. This vehicle and its components are extremely heavy and can be dangerous without the proper equipment and experience.

Hardware Parts List:

- 2- Upper Control Arms.
- 2- Ball Joints .
- 8- Pivot Bushings(Installed).
- 4- Grease Fittings.
- 4- Zip Ties

Both control arms are the same and can be installed on either side.

There are 2 small holes in the plate behind the ball joint. They are for the factory plastic rivet used to hold the ABS sensor (Fig #1).

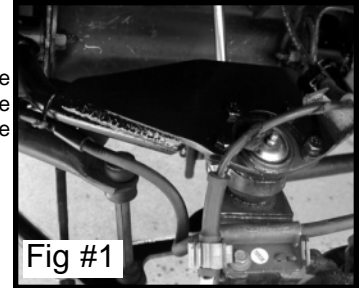


Fig #1

The 4 larger holes are for the brake lines. Use the zip ties supplied to secure (Fig #2).



Fig #2

Check out all the DJM products on the web www.DJMSuspension.com

Tech Line (310) 538-1583